INSTALLATION INSTRUCTIONS

NOTICE

1. THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND APPLICABLE LOCAL CODES AND ORDINANCES.
2. FOR WET LOCATIONS USE AN APPROVED CAULKING COMPOUND BETWEEN MOUNTING SURFACE AND BACK OF BRACKET.
3. GROUND FIXTURE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE TO INSURE PERSONAL SAFETY.
4. DO NOT ATTACH FIXTURE DIRECTLY TO THE OUTLET BOX.
5. FASTEN CROSSBAR TO OUTLET BOX THRU SLOTS IN CROSSBAR.

P/N 601.38

6. USE UL LISTED CONNECTORS TO MAKE CONNECTIONS TO SUPPLY WIRES. (NOT SUPPLIED) CONNECT BLACK FIXTURE WIRE TO BLACK SUPPLY WIRE. CONNECT WHITE FIXTURE WIRE TO WHITE SUPPLY WIRE.CONNECT GROUND WIRE TO THE GREEN SCREW ON CROSSBAR.
7. THREAD SCREWS INTO CROSSBAR AND MOUNT FIXTURE TO BAR. INSERT CAP NUT/NIPPLE
8. PLACE GASKET OVER THREADED PORTION OF DIFFUSER.
9. SCREW DIFFUSER INTO FIXTURE.
10. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

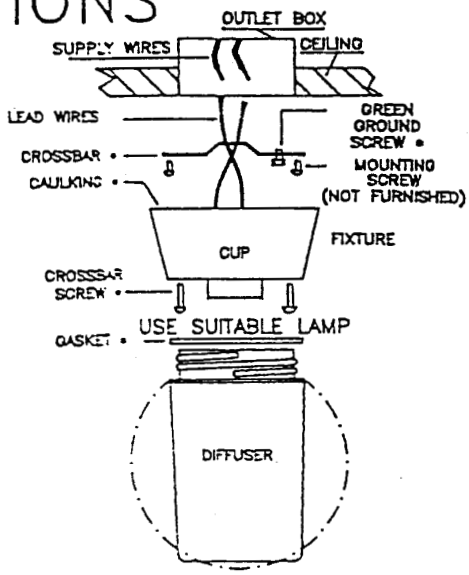

INSTALLATION INSTRUCTIONS

NOTICE:

1. THIS FIXTURE MUST BE WIRED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND APPLICABLE LOCAL CODES AND ORDINANCES.
2. FOR WET LOCATIONS USE AN APPROVED CAULKING COMPOUND BETWEEN MOUNTING SURFACE AND BACK OF BRACKET.
3. GROUND FIXTURE IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE TO INSURE PERSONAL SAFETY.
4. DO NOT ATTACH FIXTURE DIRECTLY TO THE OUTLET BOX.
5. FASTEN CROSSBAR TO OUTLET BOX THRU SLOTS IN CROSSBAR.

P/N 601.38
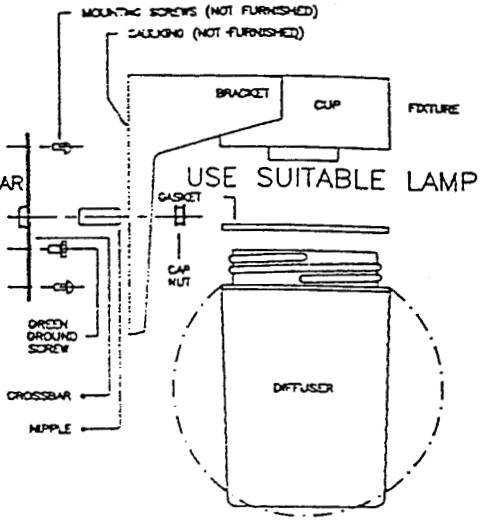
6. USE UL LISTED CONNECTORS TO MAKE CONNECTIONS TO SUPPLY WIRES. (NOT SUPPLIED) CONNECT BLACK FIXTURE WIRE TO BLACK SUPPLY WIRE. CONNECT WHITE FIXTURE WIRE TO WHITE SUPPLY WIRE. CONNECT GROUND WIRE TO GREEN SCREW ON CROSSBAR
7. THREAD NIPPLE INTO CAP NUT. POSITION FIXTURE ON WALL AND INSERT CAP NUT/NIPPLE ASSEMBLY THROUGH CENTER HOLE IN BRACKET AND SECURE FIXTURE TO WALL.
8. PLACE GASKET OVER THREADED PORTION OF DIFFUSER.
9. SCREW DIFFUSER INTO FIXTURE.
10. IF IN DOUBT CONSULT A QUALIFIED ELECTRICIAN.